

Rev. / Publication Date: 01.2021 / 08.2019

TSE K 558











The copyrights of the usage Maintenance instruction are belong to PGR company.

Usage guide could not be used partially or fully without our permission to the purpose of competition and not submitted to the use of third parties.

The right of changing informations which stated in the usage maintenance instruction partially or fully without giving any notice before or right of full changing and abolishment are kept reserved by us.







1. UNIT	i	GENERAL INFORMATION	
1.1 1.2		Important Warnings General Information	5 6
1.3		Correct Use	6
1.4		Safety Information	6 - 7
1.5		Responsibility	7
1.6		Transportation	7 - 9
1.6.1		Transportation and Freightage	7
1.6.2		Package Transportation	8
1.6.3		Equipment Transportation	8
1.6.4		Transport of Gearboxes	9
1.7		Storage	10
1.7.1		Long Term Storage Suggestions	11
2. UNIT		PRODUCT DESCRIPTION	
2.1		Gear Unit Label	12
2.2		Compatibility Declaration	12
2.3		Explanations	13
2.4		Abbreviations	14
3. UNIT		ASSEMBLY INSTRUCTIONS; PREPARATION, INSTALLATION	
	4.	· · · · · · · · · · · · · · · · · · ·	
3.1		Prerequisites of Assembly	15
3.2		Critical Applications	16
3.3		Gear Unit Mounting	17 - 18
3.3.1		Bolt Tightening Torque Value	19
3.4		Gear Unit Ventilation	19
3.5		The Mountage of the Connection Tool to the Output Shaft	20
3.6		The Mountage of the Couplings	20
3.7		The Mountage of the Standard B5 Motor to the PAM Gear Unit	21
3.8		The Demountage of the Electrical Motor (PAM)	21
3.9		Gear Unit Operating	21 - 23
4. UNIT	X	CONTROL AND MAINTENANCE	
4.1		Control and Periodic Maintenance	24 - 25
4.2		Visual Inspection	25
4.3		Check for Running Noises	26
4.4		Oil Change Procedure	26
4.5		Oil Plugs Squeezing Torc Chart	26
4.6		Change of the Ventilation Plug	26
4.7		Checks and Maintenance Table	27 - 28
4.7.1		Checks Table	27
4.7.2		Maintenance Table	28
4.8		Temperature Measurement	28 - 29
4.8.1		Temperature Sticker	29



11.1

Contact Information

49

5. UNIT	3	MOUNTING POSITIONS	
5.1 5.2 5.3		Mounting Positions Terminal Box and Cable Entrance Sides Positioning of Torc Arm	30 31 32
6. UNIT		LUBRICATION	
6.1 6.2 6.3		Lubrication Lubricant Fill Quantities Lubrication Table	33 33 34
7. UNIT		ACCESSORIES	
7.1 7.2 7.3 7.3.1 7.3.2 7.3.3 7.4 7.4.1 7.5 7.6		Low Speed Shafts The Mounting of the Protection Caps Torque Arm Dimensions PAM B5 Dimensions PAM B14 Dimensions Worm Gearmotors and Reducers with Torque Limiter Torque Adjustment SVL Versions Backstop	35 35 36 37 38 38 39 39 39
8. UNIT	9	TROUBLESHOOTING	
8.1 8.1.1 8.2		Product Disposal Disposal Troubleshooting	41 41 42 - 45
9. UNIT		AUTHORIZED SERVICE	
9.1		Authorized Service	46
10. UNIT	(\$	WARRANTY	
10.1 10.2		Declaration of Conformity ATEX Document	47 48
11. UNIT		CONTACT INFORMATION	





List of illustrations

Figure 2 : Gearbox Nameplate and Explanation12Figure 3 : Activation of Vent Plug19Figure 4 : The Mountage of the Connection Tool to the Output Shaft20Figure 5 : The Mountage of the Coupling20Figure 6 : The Demountage of the Electrical Motor (PAM)21Figure 7 : PTC Probe23Figure 8 : Temperature Sticker29Figure 9 : Mounting Positions30Figure 10: Positioning of Torc Arm32Figure 11: Output Solid Shaft35Figure 12: Protection Cover35Figure 13: Torque Arm36Figure 14: Input Shaft37Figure 15: PAM B538Figure 16: PAM B1438Figure 17: Torque Limiter39	Figure 1 : Transport of Gearboxes	9	
Figure 4: The Mountage of the Connection Tool to the Output Shaft Figure 5: The Mountage of the Coupling Pigure 6: The Demountage of the Electrical Motor (PAM) Figure 7: PTC Probe Sigure 8: Temperature Sticker Figure 9: Mounting Positions Figure 10: Positioning of Torc Arm Figure 11: Output Solid Shaft Figure 12: Protection Cover Figure 13: Torque Arm Figure 14: Input Shaft Figure 15: PAM B5 Figure 16: PAM B14	Figure 2 : Gearbox Nameplate and Explanation	12	
Figure 5: The Mountage of the Coupling Figure 6: The Demountage of the Electrical Motor (PAM) Figure 7: PTC Probe 23 Figure 8: Temperature Sticker 29 Figure 9: Mounting Positions 30 Figure 10: Positioning of Torc Arm 32 Figure 11: Output Solid Shaft 35 Figure 12: Protection Cover 35 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 Figure 16: PAM B14	Figure 3: Activation of Vent Plug	19	
Figure 6: The Demountage of the Electrical Motor (PAM) 21 Figure 7: PTC Probe 23 Figure 8: Temperature Sticker 29 Figure 9: Mounting Positions 30 Figure 10: Positioning of Torc Arm 32 Figure 11: Output Solid Shaft 35 Figure 12: Protection Cover 35 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 38 Figure 16: PAM B14	Figure 4: The Mountage of the Connection Tool to the Output Shaft	20	
Figure 7 : PTC Probe 23 Figure 8 : Temperature Sticker 29 Figure 9 : Mounting Positions 30 Figure 10: Positioning of Torc Arm 32 Figure 11: Output Solid Shaft 35 Figure 12: Protection Cover 35 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 38 Figure 16: PAM B14 38	Figure 5: The Mountage of the Coupling	20	
Figure 8: Temperature Sticker Figure 9: Mounting Positions Figure 10: Positioning of Torc Arm 32 Figure 11: Output Solid Shaft 35 Figure 12: Protection Cover 36 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 Figure 16: PAM B14 38	Figure 6: The Demountage of the Electrical Motor (PAM)	21	
Figure 9: Mounting Positions Figure 10: Positioning of Torc Arm 32 Figure 11: Output Solid Shaft 35 Figure 12: Protection Cover 35 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 Figure 16: PAM B14	Figure 7: PTC Probe	23	
Figure 10: Positioning of Torc Arm Figure 11: Output Solid Shaft Figure 12: Protection Cover Sigure 13: Torque Arm Figure 14: Input Shaft Figure 15: PAM B5 Figure 16: PAM B14	Figure 8 : Temperature Sticker	29	
Figure 11: Output Solid Shaft 35 Figure 12: Protection Cover 35 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 38 Figure 16: PAM B14 38	Figure 9 : Mounting Positions	30	
Figure 12: Protection Cover 35 Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 38 Figure 16: PAM B14 38	Figure 10: Positioning of Torc Arm	32	
Figure 13: Torque Arm 36 Figure 14: Input Shaft 37 Figure 15: PAM B5 38 Figure 16: PAM B14 38	Figure 11: Output Solid Shaft	35	
Figure 14: Input Shaft 37 Figure 15: PAM B5 38 Figure 16: PAM B14 38	Figure 12: Protection Cover	35	
Figure 15: PAM B5 38 Figure 16: PAM B14 38	Figure 13: Torque Arm	36	
Figure 16: PAM B14 38	Figure 14: Input Shaft	37	
- Ingaro Torriviin Diri	Figure 15: PAM B5	38	
Figure 17: Torque Limiter 39	Figure 16: PAM B14		
	Figure 17: Torque Limiter	39	







List of tables

Table 1 : Safety Alerts and Information Signs	5
Table 2 : Product Description (Explanations)	13
Table 3 : Abbreviations	14
Table 4 : Critical Applications (Speed Control)	16
Table 5 : Bolt Tightening Moments	19
Table 6 : Control and Periodic Maintenance Board	24
Table 7 : Oil Plugs Squeezing Torc Chart	26
Table 8 : Checks Table	27
Table 9 : Maintenance Table	28
Table 10: Terminal Box and Cable Entrance Sides	31
Table 11: Quantity of Oil in Litres	33
Table 12: Lubrication Table	34
Table 13: Output Solid Shaft	35
Table 14: Protection Cover	35
Table 15: Torque Arm	36
Table 16: Input Shaft	37
Table 17: PAM B5	38
Table 18: PAM B14	38
Table 19: Torque Limiter	39
Table 20: Disposal Table	41
Table 21: Troubleshooting	42 - 45
Table 22: Authorized Service	46

04 >



1.1 Important Warnings

Take into consideration the listed safety warnings and information signs below!

Table 1: Safety Alerts and Information Signs



EXPLOSION!

Indicates an immediate danger, which may result in death or serious injury. Contains important information regarding explosion protection.



ATTENTION!

Dangerous position and possible resultSlight and unimportant woundings



NOTE!

Advices and necessary informations for the user



DANGER!

Harmful position and possible resultDamage in gear unit and environment



DANGER OF ELECTRICITY!

Danger of electrical shock and possible resultDeath and heavy woundings



DANGER!

Danger possible resultDeath and heavy woundings



1.2 General Information

This user guide is prepared by our firm to provide information about safety transportation of gear unit/gear unit with motors, storage, installion/mounting, connection, operating, maintenance and repair processes. All the purchase and technical datas are positioned at product catalogues. Beside engineering applications, the informations which placed in this instruction, should be well read and applicated. The documents must be protected and to get ready for controlling by authorized person. The information about electrical motor could be found by guidance which prepared by motor-producing firm.

In case of loss of usage guide or becoming in unusable position it could be redemanded from PGR.

1.3 Correct Use

PGR The products are designed to use in commercial plants and are operated convenient to the current standards and directions. Technical datas and allowed usage conditions are placed in product's power tab and usage guidance. Should be conformed to all the values.

Gearboxes are designed suitable to security necessities of machine order 2006/42/EC. In all systems of which these goods installed, we advice to take 2006/42/EC machine order into a consideration. Engine compatibilities belong to manufacturing company responsibility.

1.4 Safety Information

Carefully read the manual and any instructions marked directly on the nameplates fixed to the unit. Staff working on the unit must be technically qualified and experienced to do so, and must also be equipped with the necessary safety equipment (according to the current laws). Failure to observe this requirement may result in injury or damage. Use the unit only for the purposes specified by Motovario Group. Improper use is a health and safety hazard and may cause economic damages.

Keep the unit in good running order with programmed maintenance operations. The unit can reach high temperatures in operation (in the case of variators, even when running under no or reduced load). Do not touch the casings with bare hands-use appropriate safety equipment.

For proper maintenance ensure full safety precautions have been applied, including the use of safety clothing and equipment, as required by current workplace safety legislation.

Use only original Motovario spare parts. Use only oils and greases recommended by Motovario Group. Do not dump polluting materials-dispose of them according to environmental regulations. After changing the lubricant, clean the reducer/variator's casing as well as the work area.



EXPLOSION!

In environments with potentially explosive atmospheres, only ATEX units are allowed, after verifying their certification limits. In case of non-ATEX units, or ATEX units with certification non-compliant with environmental conditions, it is compulsory to disconnect the unit power supply. Adopt all the necessary measures of environmental safety.

All the processes to be implemented during the working period;

- Related usage and maintenance instructions.
- Warning and Safety Tags in gear unit/gear unit with motor.
- Instructions and Requirements related to the system.
- Local and International requirements for safety and accidential protection.
- Disassembly of gearbox should only be made by authorized personnels.

Our Firm is not responsible where the listed items are implemented below:

- Violation of work health and safety rules in gear unit/gear unit with motors,
- Improper usage (The usage which stated out of bounds in guidance and all the usages except tag/catalogue values especially usage in high moment and different cycle) and mismounting and misusage of gear unit/ gear unit with motor in plant,

06 > — www.pgr.com.tr -

- Extremely dirty and maintenance free of gear unit/gear unit with motor,
- · Unlubricated usage,
- Usage of product other than out of tag/catalogue values,
- Wrong motor selection,
- Take out of the necessary protective plugs,
- Disuse of original pieces in gear unit/gear unit with motor,
- The using, mounting, maintaining and taking place of the uneducated, unauthorized and unqualified 3. persons.
- Additional dangers that could be generated during power cut can be prevented by materials such as brake/ key.

1.5 Responsibility

PGR, declines any responsibility in case of:

- Use of the reducer not compliant with national laws on safety and accident prevention,
- Work done by unqualified personnel,
- Incorrect installation,
- Tampering with the product,
- Incorrect or failure to follow the instructions in the manual,
- Incorrect or failure to follow the indications marked on the identification labels fixed on the units,
- For motor gearboxes, wrong delivery of electrical power,
- Incorrect connections and/or use of temperature sensors (when present),
- Use of gearbox under unlubricated conditions,
- The contents of this manual were reviewed to ensure consistency with the catalogues and etc. documents. We cannot guarantee full consistency since the changes cannot be completely prevented. However, the informations in this manual are reviewed regularly and necessary revisions are made in next editions.

The products supplied by PGR are intended to be incorporated into "complete machines", so it is prohibited to put them into service until the entire machine has not been declared compliant.



ATTENTION!

The configurations provided in the catalogue of the unit are the only ones allowed. Do not use the product in contrast with the indications provided in it. The instructions provided in this manual do not replace but compensate the obligations of current laws concerning safety regulations.

1.6 Transportation

1.6.1 Transportation and Freightage;

- Take into consideration of the article stated on package during the product delivery.
- During the delivery, product should be controlled about possible damages in carrying period.
- The firm should be informed about possible damages.
- The damaged products should not be put into use.
- If there are 2 lifting flanged eyebolts in gear unit with motor, both of them could be used in carrying process upon the size of gear unit and motor. In necessary situations, the suitable and adequated-size carrier should be used.
- Carrying safeties should be removed before the start of operating.
- The weights of the movable gear units/gear units with motors are placed in product catalogues.
- The dangerous area should be got into the secure to prevent damage to the persons.
- During the carrying process, to stand under the gear unit could cause danger of death.
- The damage of gear unit must be prevented. The crushes to the free input shafts could damaged into the gear unit.

www.pgr.com.tr _____ < 07





1.6.2 Package Transportation;

- There could be no loads on packages or the shelved surfaces should be prepared.
- The necessary carrying equipments should be prepared.
- The carrying and lifting equipments should be larged-enough to the sufficient capacity.
- The calculations should be made to the connection points and center of gravity.
- If necessary, this information should be written on the package.
- The carrying equipments (steel rope, belt, chain etc.) must be robust and suitable to the applied weight.
- During the carrying process, the load centering could be done without oscillation.

1.6.3 Equipment Transportation;

- The connection carrying point should be appointed.
- The carrying equipments (hook, chain, belt) must be prepared. To the alternative, pallet must be used for the load lifting.
- If the Crane will be used, it could be lifted perpendicular from inside to the outside of the package.
- If the forklift or palletized carrying equipment will be used, the product which removed from package should be placed on the pallet.
- The fork of the equipment should be carried out the way that gripped the pallet.
- The weight must be lifted both with slowly and constant speed and must take measure to the sudden oscillation.







ATTENTION!

During the carrying process, the fixings like the lifting lug, hook, belt, rope, locked hook must be sufficient to the load and have conformity certificate. The weights of the movable gear unit/gear unit with motor have given in product cataloque.



NOTE!

In all carrying processes, there should be avoided from both sudden movements and sudden liftings.


08 > www.pgr.com.tr




1.6.4 Transport of Gearboxes;


Figure 1: Transport of Gearboxes


SV

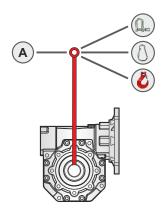

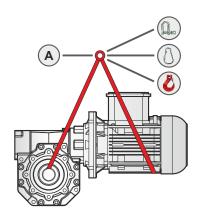

ISV / ISV - VS

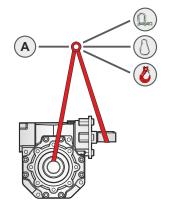

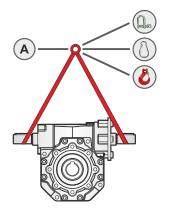



Hoop equipped (swab)



Load hook



Screw hook

 


Locked hook

Manuel lifting (Weight ≤ 15 kg) (ref. ILO Contract) Not valid for the continuous carrying.



The allowable maximum slope is 15 degree.





1.7 Storage

The certain suggestions have given about the storage conditions of the gear unit/gear unit with motor below;

- In clear and moist-airs, the storage should not be made.
- The gear unit/gear units with motor should not directly be contacted to the ground.
- The place must be moveless where the both gear unit/gear units with motors are contacted. Otherwise there could be damage during the movement.
- The gear unit should be got into the secure to the falling.
- The processed surfaces of the gear units and both solid and hollow shafts must be lubricated with protective oil.
- Gear unit/Gear units with motors must be in the place where there will be no big temperature differences between 0 and 40.
- Relative humidity must be less than %60.
- Not directly be exposed to sunlight and infraded light.
- Must be kept away from the abrasive materials which causes corrosion (dirty weather, ozon, gases, solvents, acids, salts, radioactivity, etc.) in environment.
- The protective oil SHELL ENSIS or similar product should be used on the corrodible pieces.
- If the gear unit is without oil, it must be filled with lubrication oil.



EXPLOSION!

Gearboxes during storage;

Provide protection of unpainted and processed areas by lubricant. In case of areas getting rusted, ATEX certificate will be no longer valid.



 
EXPLOSION!

These processes should be made far away from explosive atmosphere.



If there is an unproper oil inside of gearbox to operate, this oil must be discharged and be cleaned.

SECURITY MEASURES!





The output shafts and external surfaces must be thoroughly cleaned of all rustproofing product, contaminants and other impurities (use a standard commercial solvent).



Do this outside the explosion hazard area. The solvent must not touch the seal rings as this may damage them, causing them to leak.

If the oil or protective material used during storage is not compatible with the synthetic oil used during the machine's operation, the interior of the unit must be thoroughly cleaned before filling with the operating oil.

The service life of the bearing grease is reduced if the unit is stored for more than 1 year. The bearing grease must be synthetic.

10 > _____ www.pgr.com.tr -



1.7.1 Long Term Storage Suggestions;



NOTE!

- In the long-term storage or during the short-term storage, if the excessive temperature differences occur, the oil in the gear unit must be changed before the operating.
- In the fully oil filled gear unit, the oil level should be reduced according to the mounting position.



ATTENTION!

- The incorrect and excessive long storage could cause the gearbox getting defected.
- Please control not to exceed allowed storage period before starting up the gearbox.



NOTE!

- PGR, recommends long-term storage option for periods of more than 9 months holding and pausing times.
- By paying attention both to the long-term storage option and precautions which listed below, the holding of goods up to 2 years could be possible. Because of real efficiency of gearboxes depending on local conditions widely, these periods could be seen solely guide values.

Long term storage suggestions;

- Synthetic oil according to mounting position is filled of getting available for operating. Despite this, the oil level should be controlled before operating.
- The VCI Corrosion protected tool are mixed into the gear unit's oil.
- The carrying safety of the ventilation plug must not be removed during the storage.
- The gear unit must be closed to the shape of unleaked.

www.pgr.com.tr — < 11





2.1 Gear Unit Label



EXPLOSION!

Explosion hazard: Failure to comply may cause severe, or even fatal injuries. It must be checked and ensured that the gear unit type, all technical data and the ATEX labelling conform to the planning of the plant or the machine.


The type plate must be firmly attached to the gear unit and must not be subjected to permanent soiling. Please contact the PGR service department if the type plate is illegible or damaged.



EXPLOSION!

Gearboxes that are suitable to 2014/34/AB instruction, have ATEX label which is at the standard of UNI EN 13463-1 and also proper to stated contents.

An example is given below:

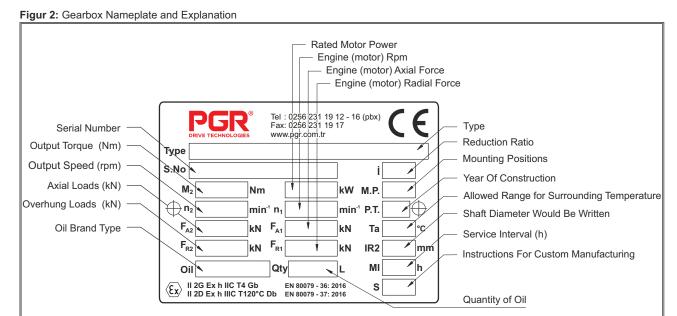

Marking according to ATEX (DIN EN 80079-36):



- **1.** Group (Always **II**, quarries are not included)
- 2. Category (for gas 2G-3G, for powder 2D-3D)
- 3. If firing protective type (c) is put
- 4. Implementing explosive group (IIC, IIB)
- **5.** Temperature Class (for gas **T1-T3** or **T4**) or maximum surface heat (for example for powder **125**) or specific maximum surface heat, look at private documents. (**TX**)
- **6.** Temperature measurement during access to a plant. (X)

2.2 Compatibility Declaration

All gear units or gearmotors (when supplied with electric motor) are designed in compliance with the provisions of applicable Essential Health and Safety Requirements, the "Machinery Directive" 2006/42/EC and, if requested, can be supplied with a Manufacturer's Declaration-Annex IIB as provided by said Directive.





EXPLOSION!


The nameplate specifications regarding the maximum surface temperature, refer to readings taken in normal ambient and installation conditions. Even minimal variations to said conditions (e.g. smaller mounting cabinet) may have a significant effect on the unit's heat output.

12 > _____ www.pgr.com.tr




2.3 Explanations

Table 2: Product Description (Explanations)

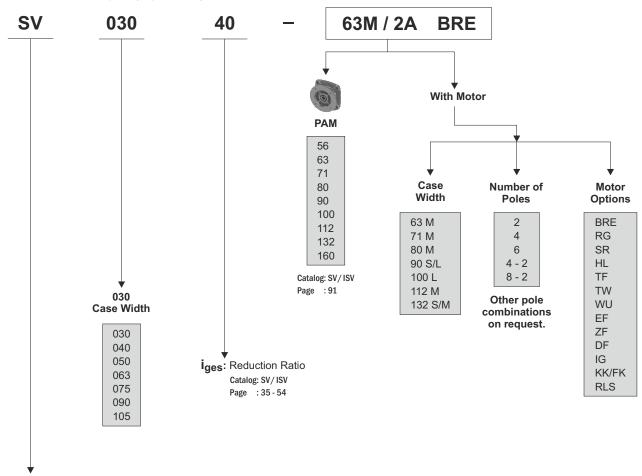

Type: PGR (Worm Gear Units) SV

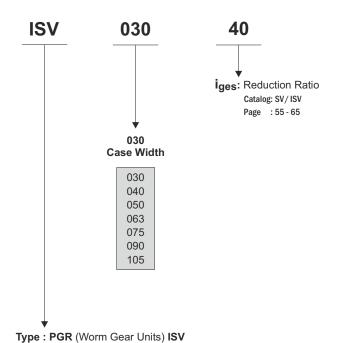





2.4 Abbreviations

Table 3: Abbreviations

Abbreviations	Meaning	Worm Gear Units
FA - FB - FC FD - FE	Output Flange	✓
PAM	PAM B5-B14 Adapter	✓
тк	Torque Arm	✓
кк	Protection Cover	✓
AB	Double Output Shaft	✓
В	Backstop	✓
AS	Single Output Shaft	✓
VS	Double Input Shaft	✓

^{✓ :} Existing designs are marked with a tick.

14 > _____ www.pgr.com.tr =

3.1 **Prerequisites of Assembly**

Take into the consideration which listed below;

- The informations placed on gear unit with motor in accordance with current network voltage.
- There could be no damage in the gear unit. At standard gear units;
- The ambient temperature should be fitted temperature values given in the 'Lubricant' part.

EXPLOSION!

Before access to a plant, those belows should be controlled and be secured:



- During assembly of gearbox, whatever any explosion danger such as due to lubricant, acid, gas and steam radiation, could not be happened and there should not be powder accumulation at gearbox more than 5 mm.
- During operating process, gearbox should be put in a well-vented room and not to be exposed in an effect of substantially heat radiation from outside.
- During operating process, the temperature of cooling air should not exceed 40C.
- Controlling of lubricant and both discharging plugs and valves must be easily accessible.
- Several other devices belong to gearbox, seperately from their own functions should have an ATEX Certificate. (Protective electrical working substance against explosion)
- The setting of gearboxes which have hollow shafts (even if there may be a friction preventer connection or may not) should be made properly according to an instructions at this hand quide.
- After set up process is completed, cleaning of gearbox would be required.
- Please be sure that all parts expanding and shifting with help of machine operator or all operating devices which prevent unwanted contacts between gearbox gaskets, would be operativeness.

Gearboxes are either dispatched without motor or motors by ATEX are assembled to a gearbox after getting supplied from electrical motor manufacturer. Electric connection belongs to end user.

At special applications the configuration of gear unit/gear unit with motor are realized convenient to the ambient conditions. Output shafts, processed surfaces, corrosion preventive material on the solid shaft/hallow shaft, ierks etc. must be cleaned.

Extensive usage-solvent must be used. The solvent should not be contacted to the bearing houses and sealing components.

In the abrasive ambient conditions, both output shaft, sealing components must be protected to the wearing Connection flanges must be attached to the hollow shaft/solid shaft according to DIN 332.

The situations where the wrong direction of rotation could caused to damages and dangers, before the mounting, the test work should implemented to the gear unit so the right direction of rotation could be determined and must got into the secure for the next operating.

In the one-way locked gear units, nibs are placed at the entry and exit side of the gear unit. The ends of the nibs shows the direction of rotation of the gear unit. During the motor connection and motor-operating with the help of magnetic field, the gear unit must be operated just at the direction of rotation.



DANGER!

 
In the one-way locked gear units, the gear unit must be operated at the direction of lock rotation, otherwise the damage could be occured.

EXPLOSION!



In case of below actions that were taken, the ATEX Certificate will be invalid.





- Use of gearbox in the area whose equipment class is I. (quarries under dangerous originated by fire-damp).
- Use of gearbox at diffrent forces apart from gotten one.
- Changing of assembly position.

< 15 www.pgr.com.tr





3.2 Critical Applications

The performance given in the catalogue correspond to mounting position B3 or similar, ie. when the first stage is not entirely immersed in oil.

For other mounting positions and/or particular input speeds, refer to the tables that highlight different critical situations for each size of reduction unit. It is also necessary to take due consideration of and carefully assess the following applications by calling our Technical Service:

- As a speed increasing.
- Use in services that could be hazardous for people if the reduction unit fails.
- Applications with especially high inertia.
- Use as a lifting winch.
- Applications with high dynamic strain on the case of the reduction unit.
- In places with T° under -5°C or over 40°C.
- Use in chemically aggressive environments.
- Use in a salty environment.
- Mounting positions not envisaged in the catalogue.
- Use in radioactive environments.
- Use in environments pressures other than atmospheric pressure.
- Avoid applications where even partial immersion of the reduction unit is required.

The maximum torque;

(*) that the gear reducer can support must not exceed two times the nominal torque (fB=1) stated in the performance tables.

(*) intended for momentary overloads due to starting at full load, braking, shocks or other causes, particularly those that are dynamic.

SV

Table 4: Critical Applications (Speed Control)

SV	030	040	050	063	075	090	105
V5: 1500 < n1 < 3000	-	-	-	-	В	В	В
n1 > 3000	В	В	В	В	Α	Α	Α
V6	В	В	В	В	В	В	В

A: Application not recommended.

B: Check the application and/or call our Technical Service.

16 > _____ www.pgr.com.tr

3.3 Gear Unit Mounting

Pay special attention to the installation conditions as these are the principal cause of damage and downtime. When choosing the motor, consider the mounting position and presence, below the motor itself, of parts, things or materials which may be damaged by oil leaks, however limited in amount. Choosing the right mounting position can eliminate many problems. It is often sufficient to place a guard under the drive to ensure operation in optimal safety.



ATTENTION!

The unit can only be mounted in the operating position indicated on the nameplate: a different operating position must be authorised by PGR.

Before the commissioning of the unit, carry out the following operations:

- Check the nameplate data of the unit and/or electric motor.
- Make sure the equipment supplied corresponds to the equipment ordered.
- Fixing to the structure of the machine must be stable, vibration-free. The structure shall not be subject to torsional movements, must ensure a continuity of transmission of any electrical and electrostatic discharges. Otherwise provide a grounding system, via a cable securely attached to the mounting areas, making sure to remove any paint in the contact area and using conductors of adequate cross section.
- For fixing use the fixing screws of minimum 8.8 quality and be careful not to buckle the casings due to improper fixing, making sure that the support surface is coplanar to the fixing surface.
- Do not install the unit in mounting positions other than those stated in the order, since different positions provide different positions of the loading, unloading and oil level plugs, in addition to a different amount of lubricant, if indicated/present.
- Check the position of the level plug. If the casing is provided with a hole with closed plug symmetric with respect to the level plug itself, if necessary, for level visibility, reverse their positions. Check the accessibility to oil loading/unloading plugs.
- Check, if possible, the correct quantity of oil, according to the operating position required. If the oil level of
 the unit is restored, do it according to the plug diagram and use oil of the same type indicated on the label.
- Replace, if any, the closing plug with the vent plug provided in the supplied kit, in the suitable operating
 position indicated in the relevant drawings.
- Check for any leakage of lubricant.
- Eliminate, if possible, any traces of dirt, from the shafts and from the areas around the sealing rings.
- Lubricate the contact surfaces to prevent oxidation or seizure.
- Check the static seals and the bolted joints.
- Do not install the unit in an environment with fumes or abrasive and/or corrosive dust.
- Do not install the unit in direct contact with food products in bulk. Occasional contact with foodstuff is allowed only with series SWFX gearmotors.
- Install all the protections designed for the rotary organs so as to ensure the system safety according to the current rules.
- Check the correct rotation direction of the output shaft of the unit.
- In case of shaft mounting configuration it is recommended to use the torque arms that can be supplied by PGR, specially designed.
- Ensure proper cooling of the motor through a good flow of air from the fan side.
- Avoid solar radiation or other heat sources, the cooling air temperature must never exceed 40°C.
- Check that the assembly of the various parts (pulleys, sprockets, couplings, etc.) on shafts is performed by
 using the proper threaded holes or any other systems able to ensure a correct operation without risking
 damage to the bearings or the outer parts of the units.
- To prevent overloading of machine equipment which gearbox is connected, supply of extreme current breaker, temperature delimeter, extreme speed monitors etc. equipments by end user is required.
- During operation of urgent stopping system, accumulated energy should be swiftly and securely be distributed or would be isolated the way that no danger is created. Distribution of accumulated energy is related with system connected to the gearbox. Necessary precautions must be taken at those systems.

For the operating fields with temperatures below 0°C, please consider the following;

- The motors must be suitable for operation with the expected ambient temperature:
- The electric motor power must be adjusted when exceeding the higher starting torques required.

www.pgr.com.tr — < 17



ASSEMBLY INSTRUCTIONS; PREPARATION, INSTALLATION

EXPLOSION!

Additional procedures for ATEX units:

- Check all nameplate data to ensure they are consistent with the application: group, category, area, maximum surface temperature, P1, n1 and M2 maximum limits, installation position, ambient temperature.
- Check for the absence of solar radiation or other heat sources.
- In case of expected ambient temperatures <-20°C or >40°C contact in advance the Technical Service by PGR.
- Check there are no fumes or abrasive and/or corrosive dust.
- Make sure not to be in close proximity to sources of ultrasound and/or ionizing radiation.
- Check that the facility has adequate protection from lightning fall.
- Check for any leakage of lubricant (if detected, stop the installation and consult the Technical Service by PGR).
- Eliminate any traces of dirt from the shafts and from the areas around the oil seal, using materials that do not generate electrostatic charges.
- Check that the environment has been cleared from the presence of a potentially explosive atmosphere, and that such a condition is maintained for the whole duration of the installation.
- Check that the components connected to the unit at both the input and output are ATEX approved.
- Use the torque arms that can be supplied.
- Ensure proper cooling of the motor through a good flow of air from the fan side; check that there are no obstructions or covers preventing the cooling of the unit.
- Check the accessibility to the warning light (or dipstick) for oil level check.
- Install the unit and connect to appropriate intervention system, any sensor thermal protection, supplied separately and when provided for. Specific instructions are given in the Annex to the manual.

EXPLOSION!



- It is vital to determine surface temperature of unit during operation under conditions provided by implementation. Observation should be repeated periodically as shown at "CONTROL and MAINTENANCE" table.
- The surface temperature must be measured around intake of action or in the connection area between motor and unit and in any case should be at a place where airstream is lesser.



The difference between measured surface temperature (Ts) plus allowed maximum ambient temperature (Tam) and measured ambient temperature (Ta) would be at least 10 C lower than allowed maximum surface temperature. (Tc, stated at label): Ts + (Tam-Ta) < Tc -10 C

Please stop operation of gearbox at improper temperatures and be consult to PGR Technical Service.

18 > www.pgr.com.tr -

3.3.1 Bolt Tightening Torque Value

Table 5: Bolt Tightening Moments

Bolt Tightening Moments [Nm]							
Dimensions	E	3olt Qualit	у	Cover Bolts	Coupling	Protective Cover	
	8.8	10.9	12.9		Bolts	Connection Bolts	
M4	3.2	5	6	-	-	-	
M5	6.4	9	11	-	2	-	
M6	11	16	19	-	-	6.4	
M8	27	39	46	11	10	11	
M10	53	78	91	11	17	27	
M12	92	135	155	27	40	53	
M16	230	335	390	35	-	92	
M20	460	660	770	-	-	230	
M24	790	1150	1300	80	-	460	
M30	1600	2250	2650	170	-	-	
M36	2780	3910	4710	-	-	1600	
M42	4470	6290	7540	-	-	-	
M48	6140	8640	16610	-	-	-	
M56	9840	13850	24130	-	-	-	
G½	-	-	-	75	-	-	
G¾	-	-	-	110	-	-	
G1	-	-	-	190	-	-	
G1¼	-	-	-	240	-	-	
G1½				300		-	

3.4 Gear Unit Ventilation

In moist places or in open air usage, the gear unit which is resistant to corrosion is recommended. The damages in paint (in ventilation plug) must soon be corrected.

The carrying safety of the ventilation plug on the gear unit is to be remove. If ventilation plug was sent seperately, it has to be inserted.

Figure 3: Activation of Vent Plug




- 1. The carrying secured ventilation plug,
- 2. Remove the carrying safety,
- 3. The ventilation safety is active.

www.pgr.com.tr — < 19


3.5 The Mountage of the Connection Tool to the Output Shaft

For the mountage of the output shaft tools look at the schema below.

 Figure 4: The Mountage of the Connection Tool to the Output Shaft



 - 1) The gear unit shaft end
- 2) The axial bearing
- 3) The connection tool



- 1) Connection unit
- A) False
- B) True

* To prevent high radial forces:the gear and sprocket must be mounted as seen in shape B.

For the mounting of the connection tools only pulling device must be used. For the position adjustment the bearing strip which is at output shaft end must be used.



NOTE!

The belt and pulleys, couplings, gears and etc. Must not be installed with hammering to the shaft end. Otherwise there could be a damage in body, bearings and shaft. In belt and pulleys, the rightness of the belt voltage must be paid attention. (suitable to the producer's data). For the not emerging of disallowed radial and axial forces, balance adjustment of the connection tool must be made.




NOTE!

With smearing a little amount of grease or heating the connection tool in a short-time (80....100), the mounting easiness may be provided.


3.6 The Mountage of the Couplings

While the couplings are mounting, it's balances must be made suitable to the datas of the producers. Must be implemented with suitable clamping device. Before mounting with the smearing of corrosion oil material to the solid output shaft/hollow shaft, mounting and demounting processes may be easened.

 Figure 5: The Mountage of the Coupling



 - a. Maximum and minimum distance
- **b.** Axial displacement
- c. Angular displacement



A basical clamping device example;

- a. The solid output shaft
- **b.** The coupling **c.** The washer
- d. The nut
- e. The stud



ATTENTION!

The belt-pulley, chain and gear drives must be protected from the contact of the external effects.

20 > _____ www.pgr.com.tr


3.7 The Mountage of the Standard B5 Motor to the PAM Gear Unit


- 1. The motor and the solid output shaft of the motor with PAM adapted, flange surfaces must be cleaned and damage control must be made. The sizes and tolerances of the motor fixing elements must be suitable to EN 60079-0.
- 2. Must be pushed till to stand to the block of motor solid output shaft.
- **3.** If the mountage is to be done in open air and the environment is wet, it is recommended that the surfaces of the motor flange and PAM adaptor have to be isolated. Before and after the motor mounting, in the shape of flange is isolated, loctite 574 or loxeal 58-14 surface isolation material should be used to flange surfaces.
- **4.** The motor, must be installed to PAM adaptor.
- 5. The bolt of the PAM adaptor has to be mounted with suitable tightening moment.

3.8 The Demountage of the Electrical Motor (PAM)

During the operating, it is crucial that the surface of the connection tool between the motor and gear unit is not rusted, for the removal of the motor not to exercise excessive load is necessary. During the seperation of motor from the gear unit without forcing, the method at the below must be implemented. Must be avoided the implementations that causes strain and harm to the gear unit.

Figure 6: The Demountage of the Electrical Motor (PAM)

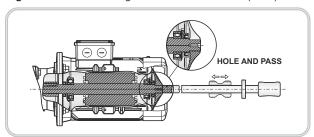

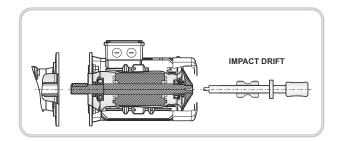

- 1. By fan with drilling the motor solid output shaft, the thread cutting must be opened.
- 2. The impact drift has to be installed to the threaded place.
- **3.** The connection screws batwean the motor and gear unit must be removed.
- 4. By the help of impact drift inertial force, the motor must be seperated from the gear unit.

The use of slots in the body of PAM, with the help of screwdriver or lever in a way that the motor is not harmed, may be removed by pushing back.

3.9 Gear Unit Operating

Before starting up the machine incorporating the unit make sure that:

- The machine is compliant with Machinery Directive 2006/42/EC, in addition to any other safety regulations in force.
- It is compliant with regulations EN 60204-1 and EN 60079-0.
- The voltage corresponds to the expected one.
- The facility complies with all applicable standards on safety and health of people at the workplace.

Moreover;

 
- Check for correct amount of oil through the appropriate level indicator, or dipstick, if any. In life lubricated
 units, without the level control, the right quantity of oil is ensured by Motovario. If the gear reducers are
 supplied without oil, fill them up with the quantity and type of oil indicated on the proper label on the gear
 reducer. Fill in the label. If topping up is necessary, use the same brand and type of lubricant as the one
 already used. Use Motovario approved lubricants.
- Make sure that the vent plug is free from obstructions.
- The start-up should be done in a gradual manner, avoiding the immediate application of the maximum load the machine can bear, in order to check for the absence of operating failures or residual application criticality.
- During start-up, to allow the oil to spread and reach optimum temperature and viscosity, it is advisable to make the device run with no load for some minutes.
- During the first hour of operation check for any anomalous vibrations and noises or overheating. If necessary stop immediately the motor and contact the Technical Service. After stopping the motor, wait 30' before disassembly.

 
www.pgr.com.tr — < 21

EXPLOSION!

Additional procedures for ATEX units:

- Check the level of external cleaning of the units, especially in the areas most affected by cooling.
- Check for leaks of lubricant, especially in areas of the sealing rings.
- To clean, use materials that do not generate electrostatic discharges.
- Check for correct amount of oil through the appropriate level indicator, or dipstick, if any. In life lubricated units, without the level control (ATEX 3GD), the right quantity of oil is ensured by PGR. Should it be necessary to top up with lubricant follow the instructions on section 6. LUBRICATION.





PLEASE NOTE! In the event of prolonged storage at low temperature it is necessary to bring the oil to the normal fluidity with a gradual dry start. Only after bringing the surface of the unit to at least 10°C, proceed, necessarily, to the above-mentioned running in phase.

- After about 3 hours of operation at full load, it is necessary to measure the surface temperature as indicated in section SURFACE TEMPERATURE. In the event that the rating value is exceeded, immediately shut off the motor and contact the Technical Service by PGR.
- In case of need, after stopping the motor, wait 30' before disassembly.

 





1

ATTENTION!

The temperature data on the nameplate indicate maximum admissible values on the unit, referring to the ambient temperature between -20 °C and +40 °C: operation is not allowed at different ambient temperatures.



EXPLOSION!

 





Midpoint **White:** Temperature is normal.



Midpoint **Black:** Temperature is very high.

22 > _____ www.pgr.com.tr -

EXPLOSION!

Thermal protector (when present);

It is a PTC probe (see Figure 7) with a trigger temperature of 120°C.

The customer shall perform the electric connection to the main electric panel to ensure the resistance thermometer correct operation regardless of the connections necessary for the system operation.

The connection must apply the positive safety logic.

Main powerboard, connections and logic must, taken together, provide a locking system to prevent, in the event of a shutdown, the unwanted start-up of the device.

In case of intervention of the PTC probe, wait about 10 min. before resetting the main powerboard.





 




Unit Electric Characteristics

Power to sensor < 280 mW
Voltage to sensor < 30 Vdc
Current to sensor < 8 mA

Connection:



ATTENTION!

Do not use the unit:



- In an environment with fumes or abrasive and/or corrosive dust;
- In direct contact with food products in bulk.

Dangerous zone,

The dangerous area of the unit is the rotating shaft extension where any person could be subject to mechanical risks from direct contact (cutting, dragging, crushing).

Make the machine compliant with DIRECTIVE 2006/42/EC providing a safety guard when the unit works in accessible zones.



4.1 Control and Periodic Maintenance



NOTE!

The maintenance and periodic maintenance works are performed by qualified person/ operator who is well-educated and is sufficient in electric and mechanic issues; the rules convenient to job health and safety and specific environmental problems are performed as protected.



DANGER!

Before the start of the maintenance work of the gear unit, gear unit should be closed at first (get into the voltage-free position), be sured service-free, needed to take measures against any accident or spinning items with the help of unexpected external load. Also all environmental safety precautions must be taken.

The precise machining of the unit's internal components ensures correct operation with minimum maintenance. In general the following rules are valid:

- Periodic check of the unit external cleaning, especially in the areas more involved in the cooling process.
- Periodic check of any leaks of lubricant, especially in the areas of the sealing rings.
- Check and cleaning of the breather plug hole. For the products non-lubricated for life, check periodically by means of the specific level indicators the correct quantity of lubricant. If topping up is necessary, use the same brand and type of lubricant as the one already used, or in any case compatible with it.
- Use oils and greases recommended by PGR. (see. **6.3 Lubrication Table**, page 34)
- During an oil change (products non-lubricated for life) follow the above mentioned recommendations.

Do not hesitate to replace unreliable components. Replace worn parts only with original spare parts. Using non-original spare parts can compromise the operation of the unit, and also voids the warranty. If you require spare parts, follow the instructions given in the spare parts section for the unit in question.

Keep the unit in good running order with periodic checks of vibration and noise, absorption and tension, wear of friction surfaces, lubricant leaks, gaskets, bolted gaskets for wear, deformation and corrosion and restore them as necessary; keep the unit clean of dust and process residue (do not use solvents or other products incompatible with the materials of construction, and do not direct high pressure jets of water directly at the unit).

For the units used in aggressive environments and food industries:

In the event of accidentally damaging the paint, restore it as soon as possible by using the repair kit available on request. Following the above mentioned rules ensures the operation of the unit and the provided safety level.

Control and Periodic Maintenance Board

Table 6: Control and Periodic Maintenance Board

Frequency	Object	Check	Operation
Weekly	Vent Plug.	Obstruction Due to the Presence of Dust. For the Positions of the Plugs Please Refer to the Operating Positions.	Release the Vent Plug.
	Oil.	Level.	Topping up.
1000h/5 months	Sealing Rings, Gaskets and Plugs.	Oil leaks and ageing.	Replacement.
	Torque Arm and Rubber Buffer.	Ageing.	Replacement.
4000h/3 years	Mineral Oil, (gear reducers non-lubricated "for life").	None.	Replacement.
8000h/6 years	Synthetic Oil, (gear reducers non-lubricated "for life").	None.	Replacement.

24 > _____ www.pgr.com.tr



 
EXPLOSION!

Atex Certified Products

Frequency, type of checks and related operations are shown in Table Maintenance Checks And Operations. Their respect is essential for the maintenance of the ATEX certification. All operations involving replacement of components must be reported in the "REDUCER MAINTENANCE SHEET" (enclosed with the reducer), filling in all the fields provided.

Observe the following precautions:

- On units equipped with cover plate for any reason not to remove the said cover.
- All operations involving the removal of covers and/or flanges should be made by experts from the Technical Centres by PGR authorized to Atex maintenance.
- Always use official Motovario spare parts. For the request of the components, follow the instructions given in the spare parts section of the specific unit.





Replacement Procedure of External Sealing Rings

Locate the seal to be replaced and proceed as follows:



- Remove the sealing ring taking the utmost care not to cause any kind of damage to the seat and to the shaft (scratches, dents, etc.).
- The new seals which will be mounted should be as same as previous one. Before assembly, the new ring should be greased on the lip (the one with double lip TC also in the space between the two sealing lips) which lip must slide always on a protection if on the shaft there are slots for keyways and/or grooves for elastic rings (e.g., spinner, ...). the grease used must be clean and free of dust, shavings and other impurities, the recommended grease to be used is AGIP-MU EP 2 (For sealing rings with double lip in VITON use the special grease TECNOLUBE BC 101).
- Be careful not to match the position of the lip in the same position of the seal lip just gotten off.
- Never insert any kind of lubricant in the outer area of the oil seal in as it would facilitate the release and make sure that the housing is clean and free of grease.
- Clean the surface of the reducer with materials that do not generate electrostatic discharges.
- After 24-hour check for leaks, in the case of oil leakage contact an authorized Technical Service by PGR authorized for Atex maintenance.

4.2 Visual Inspection

Controlling whether there is any oil leakage exists or not should be made at gearbox.

There must be controlled that if there is oil filled or not in gear unit. Should be controlled that if there is any damage in gear unit's items and whether if the connection spots are rusted.

Also must be controlled that if any cracks could emerge in hose connection lines and in rubber wedges. Leakproofing likes of dripping of gear unit's oil or dripping of cooling water and in damages and cracks, repair of the gear unit must be provided. Like these situations please get in contact with PGR.

Because of the storage and carrying, before the operation of gear unit and during at first operation, low amount of grease could flow out from bearing, this type of oil leak could not create any technical failure, the safety of gear unit and bearing operation could not be effected.

www.pgr.com.tr — < 25

KONTROL AND MAINTENANCI



4.3 Check for Running Noises

The emerge of unusual operation voice or vibrations in gear units could mean damages. In this type of situations, the gear unit must be stopped and overall revision must be made.

4.4 Oil Change Procedure

Bring the reducer to a surface temperature below 40°C before changing the oil: with warm oil, the emptying procedure and the removal of deposits is easier. Take all necessary precautions to avoid burns due to high temperature of the reducer and/or oil.

- In the case of life lubricated units (see. 6.1 Lubrication, page 33) do not perform any oil change.
- The oil must be of the same type as the one replaced (see. 6.3 Lubrication Table, page 34) use lubricants
 approved by PGR. Wanting to change the family is required to run a wash with the same type of oil you
 going to use.
- Locate the loading and unloading plugs (the loading plug can match the vent plug or the dipstick); place a container of suitable capacity under the reducer at the unloading plug (see. **6.2 Lubricant Fill Quantities**, page 33).
- Unscrew the loading and unloading plugs paying attention to progressively reduce any internal overpressure.
- Completely drain the oil and collect it in the underlying container.
- Replace the seal of the unloading plug and tighten it again by applying the appropriate tightening torque (see. **4.5 Oil Plugs Squeezing Torc Chart**, page 26).
- Fill the reducer with new oil until the level reaches the centre line of the indicator plug or the top notch on the dipstick.
- Replace the seal of the loading plug and tighten it again by applying the appropriate tightening torque (see. **4.5 Oil Plugs Squeezing Torc Chart**, page 26).
- After about 30 minutes check the correctness of the level (if necessary, provide to its restoration) and any
 oil leaks. Clean the surface of the reducer with materials that do not generate electrostatic discharges.
- Dispose of used oil in accordance with current regulations.

4.5 Oil Plugs Squeezing Torc Chart

Table 7: Oil Plugs Squeezing Torc Chart

Plug	Torc [Nm]
1/4"	7
3/8"	7
1/2"	12

4.6 Change of the Ventilation Plug

In excessive pollution situations, ventilation plug must be dismantled and got cleaned or with aluminum washer, the new ventilation plug must be mounted.

26 > www.pgr.com.tr



4.7 Checks and Maintenance Table

4.7.1 Checks Table

Table 8: Checks Table

Frequency (hours of operation/ time of installation)	Object	Check	Possible Intervention
A was a said life of	Whole unit.	Thickness of deposits of dust < 2mm.	Eliminating the dust.
A responsibility of the user, depending on the environmental conditions.	Breather plug.	Obstruction due to the presence of dust. For the positions of the plugs, please refer to the operating positions.	Release the vent plug.
1 week	Whole unit.	Noise and/or mechanical vibrations.	Change the oil (if not lubricated "for life"), and if the problem persists, stop immediately the unit for general overhaul (1).
	Unit surface.	State of the protection (painting/treatment).	Restore the missing or damaged protection.
	Adhesive thermal sensors (if any) (2).	Surface temperature (colour of the adhesive).	If excessive, compared to what is stated on the label, change the oil (products non-lubricated "for life"), and apply a new sensor. If the problem persists, immediately stop the unit for general overhaul (1).
1 month	Oil level (life lubricated products).	Level: use the appropriate indicator or dipstick / measuring rod. For the positions of the plugs please refer to the operating positions.	Topping up the oil.
	Oil plug indicator (if any).	Functions.	Replacement.
	Unit surface.	Operating temperature. For value and check position (see. 4.8 Temperature Measurement, page 28-29)	If excessive, compared to what is stated on the label, change the oil. If the problem persists, immediately stop the unit for general overhaul (1).
1000 hours/3 months	Sealing rings and plugs externally accessible.	Oil leaks and ageing.	Replacement (see "Procedure for the replacement of external oil sealing rings").
	Sealing rings not externally accessible, seals.	Oil leaks.	Replacing seals and gaskets (1).
	Torque arms (polymer bushings).	Ageing/cracking.	Replacing the bushings.
6 months	Thermal protection (if any).	Functionality of thermal protector and user circuit.	Replacing the thermal protector (2).
1 year	Product data labels.	Readability.	Request for a copy and PGR S.p.A. Technical Service.



KONTROL AND MAINTENANCI

4.7.2 Maintenance Table

Table 9: Maintenance Table

Frequency (hours of operation/ time of installation)	Object	Possible Intervention
4000 hours/3 years	Oil (if mineral and/or Tam <5°C, and/or sudden changes in temperature) gearboxes not lubricated for life.	Replacement.
8000 hours/5 years	Oil, sealing rings, gaskets and plugs.	Replacement (1)
(8000 F.N.K) hours/*(3)-*(4)	Whole unit	General overhaul (1)

NOTE!

- (1) PGR or at an authorised PGR Atex certified Technical Service.
- (2) The user is responsible for checking the circuit to which the thermal protector is connected.
- *(3) F = $(fs)^3$, where: fs = M2max / Mr2, with:



- M2max = maximum transmissible torque, on the product nameplate
- Mr2 = required torque to the output shaft; if not known, use the maximum torque of the motor installed
- N = 1500/n1, in the case of the variable-reducer, for the reducer (second element): n1=n2 max variator
- k = 1 in case of application areas 1,21 (category 2)
- k = 1.5 in case of application areas 2,22 (category 3)
- *(4) in case of coupled products, consider, for the assembly, the closest overhaul date



ATTENTION!

The customer must keep updated and available the documentation on all routine and unscheduled maintenance on.



NOTE!

The general revision should be made by the qualified personnel with considering the international laws and regulations in the plants which has the required equipments. We recommend that the general revision has to be made at the PGR service.

4.8 Temperature Measurement

The details of the ATEX temperature class or the maximum surface temperature are based on normal installation conditions. Even small changes to the installation conditions can have a significant effect on the temperature of the gear unit.



EXPLOSION!

Explosion hazard: Failure to comply may cause severe, or even fatal injuries. On commissioning, a surface temperature measurement of the gear unit must be made under maximum load. (This does not apply to gear units which are labelled as temperature class **T4** or a maximum surface temperature of **130°C** in the last line of the type plate.)

28 > — www.pgr.com.tr



KONTROL AND MAINTENANCE



For the temperature measurement, a normal temperature measuring device is required, with a measurement range from 0°C to 130°C and a precision of at least ±4°C and which enables the measurement of the surface temperature and the temperature of the air. Temperature measurement procedure:

1. Allow the gear unit to run at maximum speed under maximum load for approx. 4 hours.

- 2. Following warm-up, the temperature of the gear unit housing surface "T_{am}" must be measured close to the temperature indication label .
- 3. Measure the temperature of the air "T_{IIM}" in the immediate vicinity of the gear unit.



EXPLOSION!

Explosion hazard: Failure to comply may cause severe, or even fatal injuries. The gear unit must be shut down and PGR must be consulted if any of the following criteria do not apply.

The measured air temperature " T_{um} " is within the permissible range stated on the type plate; The measured temperature of the surface of the gear unit housing " T_{gm} " is below 121 °C and the temperature indication label has not turned black (see Figure 8).

The measured temperature of the surface of the gear unit housing plus the difference between the highest permissible air temperature "Tu" stated on the type plate and the measured air temperature must be at least 15 °C lower than the maximum permissible surface temperature, i.e.:

ATEX labelling:	II 2G Ex h IIC T4 Gb :	T _{gm} + T _u - T _{um} < 135 °C - 15 °C
ATEX labelling:	II 2D Ex h IIIC T120°C Db:	T _{gm} + T _u - T _{um} < T _{max} -15 °C

T_{am} : Measured temperature of the surface of the gear unit housing in °C

Tum : Measured air temperature in °C

T_{max}: Maximum surface temperature according to gear unit type plate (ATEX labelling) in °C

: Upper value of the permissible ambient temperature range according to the type plate in °C

EXPLOSION!

 


At normal working conditions, surface temperature should be controlled by initial operating.

The temperature must be measured under below conditions:



- Ambient temperature should not be higher than +40 C.
- At full load, it should not be operated minimum 4 hour long continuously.





- Besides please control that there would not be any abnormal temperature at places which are close to channels,
- If temperature exceeds 130 C, please immediately stop machine and get in contact with PGR.

4.8.1 Temperature Sticker



Midpoint White: Temperature is normal.



Midpoint Black: Temperature is very high.

Figure 8: Temperature Sticker

< 29 www.pgr.com.tr






5.1 Mounting Positions

Install the gearbox at the projected mountage position. For the other mountage positions except this one, please consult to our Technical Service.


SV / ISV

Figure 9: Mounting Positions

SV - ISV
030
040
050
063
075
090
105

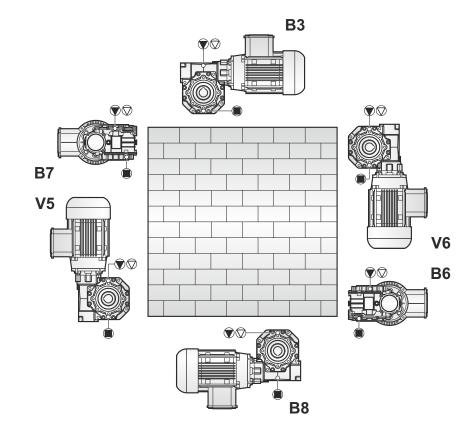

SV / ISV - PPC

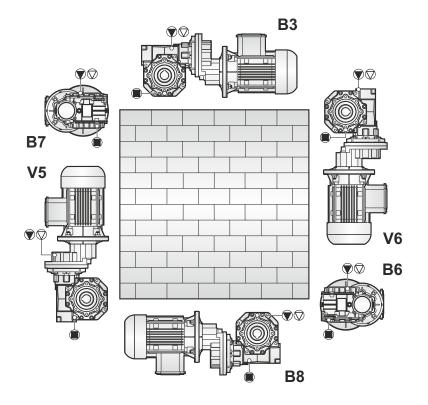

SV / ISV - PPC
040 - 063
050 - 063
050 - 071
063 - 063
063 - 071
075 - 071
075 - 080
090 - 071
090 - 080
105 - 080
105 - 090

Filling Plug

Vent Plug

Drain Plug



5.2 Terminal Box and Cable Entrance Sides (SV/ISV)

* 1 - 2 - 3 - 4: Shows terminal box position.


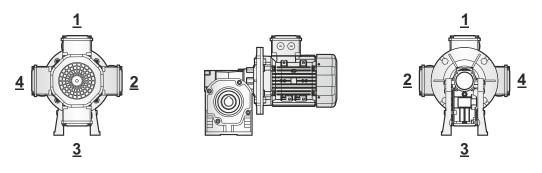


Table 10: Terminal Box and Cable Entrance Sides

SV - SV / ISV - SV						
AS1	AS2	VS1	VS2			
3	3	1	1			
PS1	PS2	BS1	BS2			
1	1	<u>3</u>	3			

 * I - II - III - IV: Shows cable entry position.






5.3 Positioning of Torc Arm

- The rubber wedge part of the torc arm must be taken into the bearing from both sides.
- Torc arms must be mounted as a voltage-free.
- For the correct mountage, the sticky (LOCTITE 510 OR EQUIVALENT) which absorbs vibration must be used.
- The screw connection of the torc arm must be tightened with proper torc and must got into the safe against loosening (LOCTITE 510 or equivalent).

Figure 10: Positioning of Torc Arm

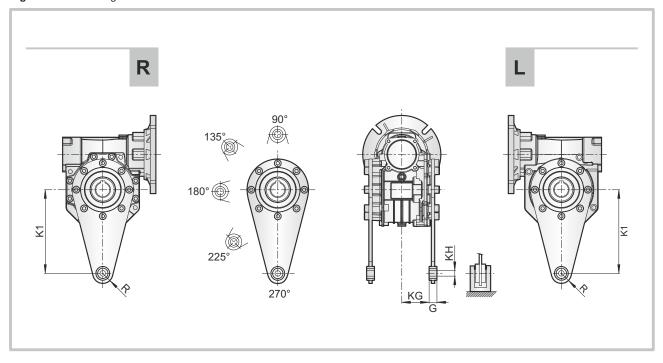

32 > www.pgr.com.tr



6.1 Lubrication

Before operating the gear unit, please check the oil level. If it is required, the same type of oil (shown on the label) should be added again (see oil table), when the gear unit is brought to the predetermined mounting position. In case it can not be used, please contact PGR Technical Service.

For possible use of different type of oils, replace the oil completely (after consulting PGR Technical Service). If synthetic oil will be used, it can be used after the oil in the gear unit has been drained and after the inside of the gear unit has been washed. For non-fat gear units, check the amount of oil that can be used and the amount required according to the working position from the additional namelabel and fill the requited same lubricant on the product label according to the oil quantity table.



NOTE!

If there is an oil leak, find the cause before restoring the lubricant level.

Do not dump the lubricant in the environment, adopt all the necessary environmental safety measures, dispose of the lubricant in compliance with the current regulations.

In case of ambient temperature not listed in the table, contact our Technical Service. If the temperature is lower than -30°C or higher than 60°C use special mixture seal rings. For oil changes follow what indicated in the "ORDINARY MAINTENANCE Table".



EXPLOSION!



Check the oil level before starting up the unit, operation that must be carried out when the unit is arranged in the predetermined mounting position, if necessary restore the level with oil of the same type as the one supplied by the Manufacturer (see the table in FIRST SUPPLY LUBRICANTS, ATEX CERTIFIED FOR USE BY PGR) shown on the nameplate. In case of unavailability, contact the Technical Service by PGR.

6.2 Lubricant Fill Quantities



NOTE!

The oil amount at the chart is only indicator and for filling correctly your consultation to oil level plug or oil gauge is required if either one exists. Any deviation at degree, generally related with construction tolerance, also could be changed depending to the placing of gearbox or mountage surface at the customer's working place. Therefore customer controls level when gearbox is set up and if necessary, restore level.

Table 11: Quantity of Oil in Litres ~

SV	030	040	050	063	075	090	105
В3							
В8							
B6 - B7	0.04	0.08	0.15	0.3	0.55	1	1.6
V5							
V6							

PPC	063	071	080	090
B3 - B8				
B6 - B7	0.05	0.07	0.15	0.16
V5 - V6				

www.pgr.com.tr — < 33

6.3 Lubrication Table

At below table, registered brands or names of goods have been showed according to gearbox lubricant type which stated on product label (see. **2.1 Gear Unit Label**, page 12). This situation means that just a product should be used convenient to the lubricant type that shown on the label. In particular situations, stated product's name is shown on gearbox product label.

	T°C ISO SAE	Agip	Shell	ESSO	Mobil [*]	Castrol	bp
SV 030 105 PPC 063 090 Synthetic oil	(-25) / (+50) ISO VG320	TELIUM VSF320	TIVELA OIL SC320	S220	GLYGOYLE 30	ALPHASYN PG320	ENERGOL SG-XP320

Table 12: Lubrication Table



DANGER!

The synthetic and mineral oils must not be mixed with eachother.



NOTE!

At ambient temperatures under -30° degree and above 60° degree for leakproofing element inside the shaft, special quality material must be used.



NOTE!

This table lists compatible lubricants of different suppliers. Within the same viscosity class and type of lubricant the supplier can be chosen freely. In case you change the viscosity class resp. The type of lubricant you should contact us in advance otherwise we cannot assure the proper function of our drive and the warranty becomes void.


34 > _____ www.pgr.com.tr -





7.1 Low Speed Shafts

Figure 11: Output Solid Shaft

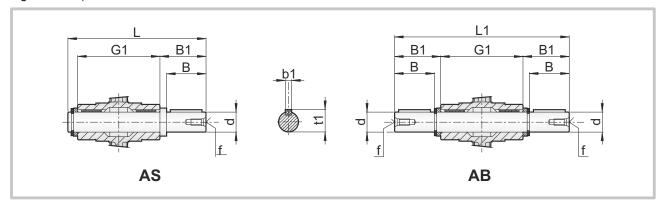

	d	В	B1	G1	L	L1	f	b1	t1
030	14h6	30	32.5	63	102	128	M6	5	16
040	18h6	40	43	78	128	164	M6	6	20.5
050	25h6	50	53.5	92	153	199	M10	8	28
063	25h6	50	53.5	112	173	219	M10	8	28
075	28h6	60	63.5	120	192	247	M10	8	31
090	35h6	80	84.5	140	234	309	M12	10	38
105	42h6	80	84.5	155	249	324	M16	12	45


Table 13: Output Solid Shaft

7.2 The Mounting of the Protection Caps

For preventing shrink disc and free rolling output shafts (the side which customer does not use) woundings, a contact protection is required. A single protection cover (KK or KS-KK) could be placed as a contact protection.

- The protection cap must be attached with fixing bolts to the mounting place.
- Must be tightened with the proper torc.

Figure 12: Protection Cover

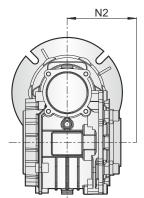

	030	040	050	063	075	090	105
N2	42	50	58	69	74	86	94

Table 14: Protection Cover




7.3 Torque Arm

- The rubber wedge part of the torc arm must be taken into the bearing from both sides.
- Torc arms must be mounted as a voltage-free.
- For the correct mountage, the sticky (LOCTITE 510 OR EQUIVALENT) which absorbs vibration must be used.
- The screw connection of the torc arm must be tightened with proper torc and must got into the safe against loosening (LOCTITE 510 or equivalent).

SV series gearboxes could be equipped with vibration isolator torc arm; after completing assembly, be sure that there is not axial preload of vibration isolator connection. (For SV series gearboxes to support both sides at connection). Please control that there would not any abnormal vibrations both at the product and backbone structure.

Figure 13: Torque Arm

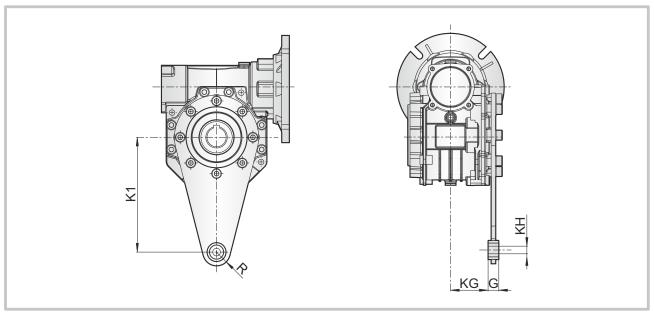

	K1	G	KG	KH	R
030	85	14	24	8	15
040	100	14	31.5	10	18
050	100	14	38.5	10	18
063	150	14	49	10	18
075	200	25	47.5	20	30
090	200	25	57.5	20	30
105	250	30	62	25	35

Table 15: Torque Arm

36 > _____ www.pgr.com.tr



7.3.1 Dimensions

ISV

Figure 14 - a: Input Shaft

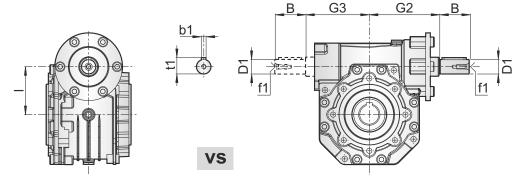
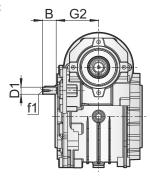


Table 16 - a: Input Shaft

ISV	030	040	050	063	075	090	105
В	20	23	30	40	50	50	60
D1	9 j6	11 j6	14 j6	19 j6	24 j6	24 j6	28 j6
G2	51	60	74	90	105	125	142
G3	45	53	64	75	90	108	135
- 1	30	40	50	63	75	90	110
b1	3	4	5	6	8	8	8
f1	-	-	M6	M6	M8	M8	M10
t1	10.2	12.5	16	21.5	27	27	31

ISV / SV

Figure 14 - b: Input Shaft





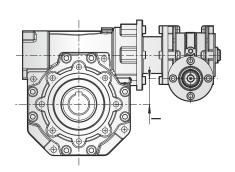


Table 16 - b: Input Shaft

ISV / SV	030 - 040	030 - 050	030 - 063	040 - 075	040 - 090	050 - 105
В	20	20	20	23	23	30
D1	9 j6	9 j6	9 j6	11 j6	11 j6	14 j6
G2	51	51	51	60	60	74
I	10	20	33	35	50	60
b1	3	3	3	4	4	5
f1	-	-	-	-	-	M6
t1	10.2	10.2	10.2	12.5	12.5	16

For the missing dimensions, please consider the drawing of relevant ${\bf SV}$ size.

- www.pgr.com.tr — < 37



7.3.2 PAM B5 Dimensions

Figure 15: PAM B5

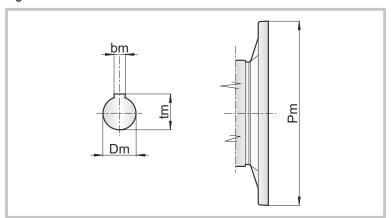


Table 17: PAM B5

B5	PAM								
D 3	056	063	071	080	090	100	112	132	160
Pm	120	140	160	200	200	250	250	300	350
Dm	9	11	14	19	24	28	28	38	42
bm	3	4	5	6	8	8	8	10	12
tm	10.4	12.8	16.3	21.8	27.3	31.3	31.3	41.3	45.3

SV (105) tm= 40.3 (PAM 132)

7.3.3 PAM B14 Dimensions

Figure 16: PAM B14

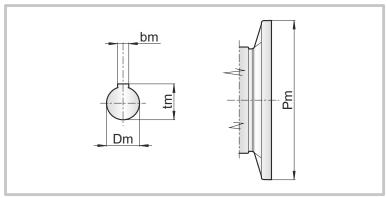


Table 18: PAM B14

B14		PAM										
D14	056	063	071	080	090	100	112	132				
Pm	80	90	105	120	140	160	160	200				
Dm	9	11	14	19	24	28	28	38				
bm	3	4	5	6	8	8	8	10				
tm	10.4	12.8	16.3	21.8	27.3	31.3	31.3	41.3				

38 > www.pgr.com.tr



7.4 Worm Gearmotors and Reducers with Torque Limiter

The torque limiter, in oil bath, is designed for sizes 050-063-075-090. The device assures the protection of the transmission from accidental high overloads which could damage the gearbox and the power transmission components. If necessary, it prevents reversing conditions of the worm gear unit by opportunely loosening the lock nut.





Features:


- External dimensions are almost the same as the version without torque limiter.
- No difference of the mountings.
- No difference of the hollow output shaft diameter with respect to the standard gearbox.
- The slipping torque can be easily adjusted by means of an external ring nut.
- No maintenance required on slipping components.
- Functional features are the same as standard version.


7.4.1 Torque Adjustment


The adjustment is carried out during assembly at about 80% of the nominal torque reported in the catalogue. This torque is transmitted by friction and so many factors could influence the adjustment value, like: temperature, running-in, vibrations, etc., therefore it is advised to adjust the torque limit by means of the lock nut when installing the gearbox on the machine, in accordance to application requirements.

7.5 SVL Versions

  Figure 17: Torque Limiter

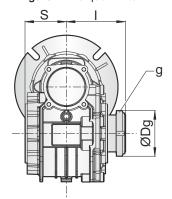





D The torque limiter is supplied in D position.

Table 19: Torque Limiter

	I	S	Dg	g	b	t	D	T1	T2
040	55	39	63	M30x1.5	6	20.8	Ø18	28	28
050	63.5	46	56	M40x1.5	8	28.3	Ø25	33	33
063	74	56	62	M45x1.5	8	28.3	Ø25	37	37
075	78.5	60	68	M50x1.5	8	31.3	Ø28	40	40
090	89.5	70	80	M60x2	10	38.3	Ø35	45	45

For the missing dimensions, please consider the drawing of relevant SV size.

www.pgr.com.tr — < 39



7.6 Backstop

Gearboxes could be given with a single return locking fixing at the entry part. Locks allow shafts only turn to one side. Depending on dimensions, without need of additional place, it could be mounted to the motor. During ordering process, gearbox turning and locking sides should be determined.

NOTE!



The action of the motor in locking direction could cause fracturing of the lock.

- The motor absolutely must not rotated to the direction of locking. To provide specified direction of rotation, it must be careful that the motor is supplied by direct current.
- For the purpose of controlling gear unit's output solid shaft/gear unit's output hollow shaft could be operated by half tour to the opposite direction of locking once.

The allowed direction of rotation is marked on the gear unit.

40 > _____ www.pgr.com.tr -



8.1 Product Disposal

Dismantle the machine, separating the parts following the instructions given in this manual.

You must group the parts according to the materials they are made of: iron, aluminium, copper, plastic and rubber.

The parts must be disposed of by the relative centres in full compliance with the laws and force on the matter of dismantling and demolishing industrial waste.

Waste Oil: At the disposal of waste oil, please obey both to the environmental protection laws as well as rules and regulations those are in force into countries which the machine has been using of.

8.1.1 Disposal

The valid regulations must be taken into the consideration for the waste materials.

Table 20: Disposal Table

GEAR UNIT COMPONENTS	MATERIAL
Toothed wheels, shafts, rolling bearings, parallel keys, locking rings,	Steel
Gear unit housing, housing components,	Grey cast iron
Light alloy gear unit housing, light alloy gear unit housing components,	Aluminium
Worm gears, bushes,	Bronz
Radial seals, sealing caps, rubber components,	Elastomers with steel
Coupling components	Plastic with steel
Flat seals	Asbestos - free sealing material
Gear oil	Additive mineral oil
Synthetic gear oil (rating plate code: CLP PG)	Polyglycol - based lubricants
Cooling spiral, embedding material of the cooling spiral, screw fittings	Copper, epoxy, yellow brass



NOTE!

Please do not diffuse any biologically indivisible materials, oil and noninclusive components (PVC,rubber,resins and etc.) to the environment.



ATTENTION!

Do not reuse damaged parts during inspection, only should be changed by expert personnels.

www.pgr.com.tr — < 41





8.2 Troubleshooting

Table 21: Troubleshooting

NO	PROBLEM	OBSERVED	SOLUTION
1	Gearbox does not work.	The noise is not coming from gearbox. Output shaft of the gearbox is not rotating. Driver / frequency invertor is not be used.	Check the connection of electric motor, voltage and frequency. The values could be same with the values which are on the motor label. Look at to the motor usage guide. If the solution is not found look to the article 50.
2	Gearbox does not work.	The noise is not coming from gearbox. Output shaft of the gearbox is not rotating. Driver / frequency invertor is used.	Look to the guide of driver / frequency invertor or driver usage guide. Determine that error is not originated from driver / frequency invertor by seperating electric motor either from driver and frequency invertor and making direct connection to the motor.
(3)	Gearbox does not work.	A different noise is coming out of the gearbox. But earbox and motor shaft are not rotating. Driver / frequency invertor or magnetic brake are not used.	The first thing that has to be made is to check whether motor connection, voltage and frequency are identical with motor label values. If there is not any problem, to pull out gearbox from the machine and try to operate in neutral. If gearbox works, the power of motor may not be enough to operate system. If the motor which connected to the gearbox is monophase, take off capacitors should be controlled. Even the motor does not work despite all tests and examinations, look at to the article 50.
4	Gearbox does not work.	A different noise is coming out of the gearbox. But gearbox and motor shaft are not rotating. Driver / frequency invertor or magnetic brake are used.	The frequency invertor or driver usage guide should be examined. Determine that error is originated whether from driver / frequency invertor by seperating electric motor either from driver and frequency invertor and making direct connection to the motor. If the gearbox does not work, look at to the article 50.
5	Gearbox does not work.	A different noise is coming out of the gearbox. But gearbox and motor shaft are not rotating. Magnetic brake is used.	It is necessary to check whether electric motor connection, voltage and frequency are identical with motor label values. Look at to the motor usage guide. Be sure that brake is working. If the brake is assembled by us to check whether it is made correctly according to the schema at the usage and maintenance instructions. If the error is not found to check whether the brake is operating by making direct connection to the brake appropriate to the brake voltage. When the electric is given, the noise of the opening of brake will come. If the brake is not working even by giving electric, the diode of brake could be in failure. To feed the motor directly according to the informations on the label when the brake is seperated from disc. If the problem is continuing, the power of the motor may not be enough. Look to the article 50.
6	Gearbox does not work at low speeds / frequencies.	Use driver / frequency invertor.	The motor feeding frequency is declining at low speeds. For the operating of motor at very low frequencies, it is essential to adjust motor parameters and frequency invertor parameters very well. Besides for the low speeds, there could be big changes even at the gearbox efficiency. To enlarge motor power and invertor or for to reach your requested cycle range, change the gearbox ratio.

42 > _____ www.pgr.com.tr -



TROUBLESHOOTING



NO	PROBLEM	OBSERVED	SOLUTION
7	Gearbox does not work after long awaitings or at mornings.	Environmental temperatures are dropping below -5°C.	The gearbox oil is not suitable to the environmental temperatures where it works. It is necessary to use low viscocity oils or to protect gearbox group from cold. To find proper oil look to usage guide or examine lubricating pages from the product catalogs. To work at higher environmental temperatures could be a solution. If the problem is continuing, the motor power should be increased.
8	Gearbox is very heating up.	You use worm screw type gearbox and environmental temperature is under +40°C.	When the gearbox is working under the full load, gauge gearbox surface temperature with heat meter. If it is under +90°C it is normal and no harm to gearbox. All worm screw and ATEX compatible helical gearboxes could be used up to the +120°C surface temperatures. If the temperature is above the +120°C and gearbox is ATEX compatible immediately stop gearbox and inform to PGR. Look to the article 50. If it is the product without ATEX, to check the oil amount according to the mountage position. Be sure that the mounting position written on the label and mounting position which gearbox is working should be identical. If not look to the article 50. To the gearboxes without worm screw types at heatings above +80°C, look to the articles 9 and 50.
9	Gearbox is very heating up.	You use helical gearboxes and environmental temperature is under +40°C.	When the gearbox is working under the full load, gauge gearbox surface temperature with heat meter.If it is under +90°C it is normal and no harm to the gearbox. All gearboxes with ATEX are designed to work at maximum +120°C. If the temperature is above +120°C and gearbox is ATEX compatible immediately stop gearbox and inform to PGR. The gearboxes without ATEX are designed to work at maximum +90°C temperature values. If the gearbox temperature is above the +90°C, control the oil amount according to mounting position. Be sure that the mounting position written on the label and mounting position which gearbox is working should be identical. If there is inconsistency look to the article 50.
10	Gearbox is very heating up.	Environmental temperature is above +40°C.	The standard gearboxes are designed to work at maximum +40°C. Temperatures above +40°C, special applications and additions should be done. In these situations please consult to PGR.
11	Gearbox is working noisy.	Noise is regular and perpetual.	Control the mobile machine elements. Operate gearbox without load by seperating from the system. If you hear the same noise, bearings which belong to gearbox or motor could be in failure. Look to the article 50.
(12)	Gearbox is working noisy.	Noise is irregular.	Control the mobile machine elements. Operate gearbox without load by seperating from the system. If the same noise is continuing, foreign objects could be in the oil. Change the oil and control the foreign objects in the oil. If the metal piece is found into the controlled oil, the gearbox could be damaged. Look to the article 50.



TROUBLESHOOTING

NO	PROBLEM	OBSERVED	SOLUTION
13	Gearbox is working noisy.	Noise is regular with clicking.	Control the mobile machine elements. Operate gearbox without load by seperating from the system. If the same noise is continuing, gearbox parts could be damaged. Look to the article 50.
14	Gearbox is working noisy.	Noise is regular and fluctuating.	Control the flexure of connection elements which connect to output shaft. Seperate element which is connected to output shaft and operate gearbox without load. If the same noise is continuing, look to the article 50.
15	Gearbox is working noisy.	Gearbox has motor with brake and noise is coming from the brake side.	The noises could be coming from the brake like in the shape of low level randomly tickings and it is normal. If the noise level is disturbing, brake could be damaged or there may be a problem at the gap adjustment between lining and disc. Look to the article 50.
16	Gearbox is working noisy.	You use frequency invertor and the noise is changing every time by the change of cycle.	Frequency invertor parameters may not be compatible with your used motor. Examine frequency invertor usage guide and if the same problem is continuing look to the article 50.
(17)	Oil leakage is existing.	Oil leakage from the seal.	If the environmental temperature is above +40°C and there is continious working over 16 hours, according to the mounting position pull out a plug which is on the top and use ventilation plug instead of it. If your situation is not suited to this, seal could be damaged. Look to the article 50.
(18)	Oil leakage is existing.	Oil is leaking from the plug.	If you use the ventilation plug, be sure that the plug is at the right position. According to the mounting position of the gearbox, plug which is on the top could be ventilation plug. The plug may loosened, clean the surface and plug itself and squeeze it again. If the same problem is continuing, look to the article 50.
(19)	Oil leakage is existing.	Oil is coming out of the the housing.	To observe where the oil is exactly coming from. It is leaking from the oil plug, oil cover or seal and could flow onto the housing. If the situation is like this, look to the article 18 and 19. If you sure that oil is coming out of the housing there could be cracks and fractures at the housing. Look to the article 50.
(20)	Oil leakage is existing.	Oil is coming out of the the cover.	A gasket that is used between cover and housing is not performing its leaktightness duty. Dismantle the cover clean the bottom side and assemble cover to its place by smearing liquid gasket. If the problem continues look to the article 50.
21	Gearbox is making regular vibrations when it is worked at the assemble point.	You use torc arm.	The reason of the vibration of gearbox is originated from the shaft flexure which gearbox is connected. When the torc arm is used, it has no harm to gearbox and it is usual situation.

44 > ———— www.pgr.com.tr =



TROUBLESHOOTING



NO	PROBLEM	OBSERVED	SOLUTION
(22)	Gearbox is making random vibrations when it is worked at the assemble point.	You use torc arm.	The reason of the vibration of gearbox is because of shaft flexure which the gearbox is connected and passing gap between shaft and bushing. Control your shaft hole passing tolerance. When the torc arm is used, it has no harm to gearbox and it is usual situation.
23	Motor is warming a lot.	Motor is working above its normal ampere. Environment is clear.	There could be overloading or motor power is insufficient. Motor could be in failure. Look to the article 50.
24	Motor is warming a lot.	Environment is dusty.	Be sure of whether motor fan bowl and motor cooler cores are clean for the air passing. If you use extra fan be sure that it is working. If there is invertor usage at the motor and works at low frequencies, the motor fan may not be sufficient. Use extra fan in these situations. If the problem continues look to the article 50.
25	Motor shaft is rotating but gearbox shaft is not.	Friction noise is coming from inside of gearbox or only there is motor noise.	There could be a damage at the gearbox parts. Look to the article 50.
(26)	Motor shaft is rotating but gearbox shaft is not.	You use chain geared or pinion geared at the output shaft of gearbox.	The damage could be originated of poligon impact formed by chain geared or from the radial load. Gearbox connection points may not be rigid enough. Be sure that you are able to use proper chain geared and pinion geared for used gearbox. Recalculate maximum allowable radial load according to this position. Look to the article 50.
(27)	Output shaft is cut.	You use either chain geared or pinion geared.	The damage could be originated of poligon impact formed by chain geared or from the radial load. Gearbox connection points may not be rigid enough. Be sure that you are able to use proper chain geared and pinion geared for used gearbox. Recalculate maximum allowable radial load according to this position. Look to the article 50.
28	Gearbox is stopping too late.	You use motor with brake	Control the electric connection schema of brake. Be sure that there is not assembled delayed diode onto the brake. If there is delayed diode, it could be changed. (Hoisting gearboxes are excluded PCS)
(50)	Service is required.	Informing of PGR Company.	Please contact with PGR company. Communication informations are given at the usage guides,catalogs. Mechanical parts can only be changed either by PGR or within the knowledge. Any change that is to be made without the knowledge of PGR would cancel both guarantee of product and all certificate decrelations and remove the responsibilities of PGR over the product.

If there are problems or malfunctions different to the onesdescribed here contact a PGR Industries Assistance Centre.



AUTHORIZED SERVICE

9.1 Authorized Service

They are skill and qualified people, which are determined by company. They have education about electricaland mechanical subject.



NOTE!

At below; the list took in place decided by our firm, authorized service and customer (user) which is about control and maintenance criterias/applications. Must be obliged to the informations which were given in the list. To the contrary that Usage and Maintenance directions become invalid.

Table 22: Authorized Service

No	CRITERIA	MANUFACTURER (PGR)	AUTHORIZED SERVICE	CUSTOMER (USER)
1	Disassembly of geared unit	✓	√	х
1.1	Case changing	✓	✓	x
1.2	Gear changing	✓	✓	x
1.3	Solid / shaft changing	✓	✓	X
1.4	Changing of all consumable material except sealing materials	✓	✓	x
2	Oil cup changing	✓	✓	✓
3	Seal changing	✓	✓	✓
4	Oil changing	✓	✓	✓
5	Motor montage to IEC adapter type	✓	✓	✓
6	Motor montage to PAM type	✓	✓	✓
7	Assembly of geared unit with W cylinder type	✓	✓	✓
8	Disassembly of motor from IEC / PAM type	✓	✓	✓

✓ : SUITABLE

X : NOT SUITABLE

 $\ensuremath{\textbf{2-3}}$: Send to the contaminated waste disposal (licensed firm).

4 : Send to the licensed firm for the purpose of disposal.

46 > _____ www.pgr.com.tr -



10.1 Declaration of Conformity



DECLARATION OF CONFORMITY

COMPANY

NAME : POLAT GRUP REDÜKTÖR SAN. VE TİC. A.Ş.

ADDRESS: Ata OSB Mah. Astim 1.Cad. No: 4, PK 105 Efeler / Aydın / TURKEY

PHONE: +90 256 231 19 12 - 16 (pbx)

FAX : +90 256 231 19 17

PRODUCT

NAME: WORM GEAR UNITS

TYPE : SV/ISV BRAND : PGR

MODEL : SV / ISV 030 ... 105

030 / 040 ... 050 / 105

040 / PPC 063 ... 105 / PPC 090

APPLIED REGULATIONS:

Machinery Directive 2006/42/EC ATEX 2014/34/EU Low Voltage Directive 2014/35/EU

APPLIED HARMONIZED STANDARDS: TS EN ISO 12100:2010

TS EN ISO 13857 TS EN 60204

TS EN ISO 80079-36:2016 TS EN ISO 80079-37:2016

Our products comply with the regulations and standards described above. When our products are fitted with an electric motor, we fulfill the requirements to the extent that the Low Voltage Regulation is included in the application area 2014/35/EU.

CE

Applied Person Neclet DEMİR General Manager

Date: 11 July 2016

www.pgr.com.tr — < 47

10.2 ATEX Document





CERTIFICATE OF RECEIPT OF TECHNICAL FILE

ACCORDING TO ATEX 2014/34/EU DIRECTIVE

- [2] According to Article 13.1 b (ii), Directive 2014/34/EU, we confirm the receipt of documentation to retain it.
- [3] Receipt Number: SCA18TDEX006
- [4] Technical File Number: PGRATEX18 / Rev.00
- [5] Date: 22.03.2018
- [6] Equipment or Protective System: GEARBOX GEAR UNIT Models: P,PA,PF,PD,PM,PKD,PSH,P/+A,PMRV,PMRV Plus,A,F,D,M,K,PL,PLB,PH,PB,PYK,PRC/PRCF,PEX,PCS
- [7] Manufacturer: POLAT GROUP REDUKTOR SAN. VE TIC. A.S.
- [8] Address: ATA MAH. ASTIM. OSB 1. CADDE, NO:4 EFELER-AYDIN/TURKEY
- [9] SCA, notified body that no. 2336, in accordance with the Council Directive 2014/34/EU of 26 February 2014, herewith acknowledges receipt, from the Manufacturer, of the technical documents (Technical File).
- [10] This acknowledgement is an evidence about fulfillment of manufacturer duties concerning communicate the dossier of technical documentation to notified body in accordance with clause Article 13.1 b (ii) of Directive 2014/34/EU ATEX. Further requirements of the Directive apply to the manufacturing process and supply of this equipment or protective system.
- [11] SCA holds the Technical File for at least ten years from the date of the last manufactured apparatus. In case of lack of a written acknowledgement from the manufacturer about the intention of maintaining the Technical File deposit, SCA will hold the TECHNICAL FILE in its archives for 10 years, starting from the date this receipt is confirmed.
- [12] This receipt can be reproduced only entirely and with no change.
- [13] Reference standards:

Issue Date: 26.03.2018

Translation Date: 20.06.2019

EN ISO 80079-36:2016, EN ISO 80079-37:2016

 $[14] \quad \hbox{Marking of the equipment or protective system according to manufacturer's declaration:}$



Digitally signed by ISMAIL OĞLAKCIOĞLU

İsmail OĞLAKCIOĞLU SCA Technical Manager

SCA Belgelendirme ve Özel Eğitim Hizmetleri Ltd. Şti. Mansuroğlu Mah. 284/1 Sok. No:1 İhsaniye Plaza D.17 Bayraklı IZMIR / TURKEY Phone: 0090- 232 - 489 02 12 Fax: 0090 - 489 02 17

FR.51/01.06.2018/00

01/01

48 > _____ www.pgr.com.tr



11.1 Contact Information

FACTORY

ATA OSB MAH. ASTİM 1. CAD. NO: 4, PK 105 Efeler / Aydın / TURKEY

Tel : +90 256 231 19 12 - 16 (pbx)

Fax : +90 256 231 19 17 Web : www.pgr.com.tr

e-mail : info@pgr.com.tr - satissonrasi@pgr.com.tr

ASSEMBLY FACTORY AND LOGISTICS CENTER

AYDIN ORGANİZE SANAYİ BÖLGESİ UMURLU MAH. NO:66 Efeler / Aydın / TURKEY

Tel : +90 256 231 19 12 - 16 (pbx)

Fax : +90 256 231 19 17 Web : www.pgr.com.tr

e-mail: info@pgr.com.tr - satissonrasi@pgr.com.tr

AREAS

ANKARA AREA

AHİ EVRAN CAD. 1203.SK NO:18 D:58-60 İSGEM Ostim / Ankara / TURKEY

Tel : +90 312 354 44 08 +90 312 385 86 68

Fax : +90 312 385 79 27 Web : www.pgr.com.tr e-mail : ankara@pgr.com.tr

ISTANBUL AREA

ŞERİFALİ MAH. ALPTEKİN CAD. SÖYLEŞİ SOK. NO:31 Ümraniye / İstanbul / TURKEY

Web: www.pgr.com.tr e-mail: istanbul@pgr.com.tr

GERMANY AREA

IN DER SCHLINGE 6, D-59227 Ahlen / GERMANY

Tel : +49 (0) 238 2855 7010

+49 (0) 238 2855 7011 +49 (0) 238 2855 7012

+49 (0) 238 2855 7016

Web: www.pgr.com.tr e-mail: info@pgrgermany.de

www.pgr.com.tr — < 49





- Ata OSB Mah. Astim 1. Cad. No: 4, Pk 105 Efeler / Aydın / TÜRKEY
 T: +90 256 231 19 12 16 (pbx)
 F: +90 256 231 19 17

- info@pgr.com.tr satissonrasi@pgr.com.trwww.pgr.com.tr